MANUAL INSTALLATION

External, Shaft Assembly

1. Separate the ring coils and insert one end of the ring into the groove.

2. Wind the ring by pressing down around the circumference until the entire ring is inserted into the groove.

Ease and simplicity of installation are two main reasons to utilize a Spirolox Retaining Ring in your assembly.

Multiple ring layers offer greater axial flexibility of the ring, allowing it to be inserted by hand and wound into the groove.



FIGURE 1



FIGURE 2



FIGURE 3



FIGURE 4

Internal, Housing Assembly



FIGURE 1

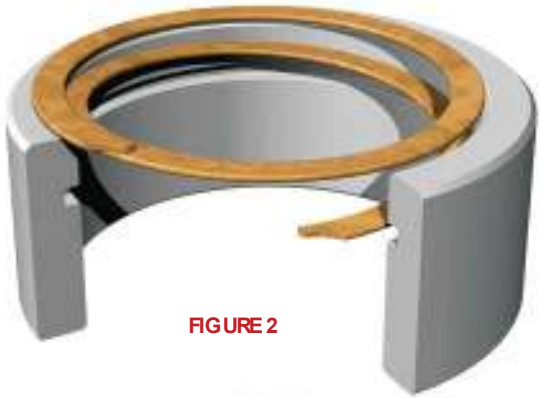


FIGURE 2